

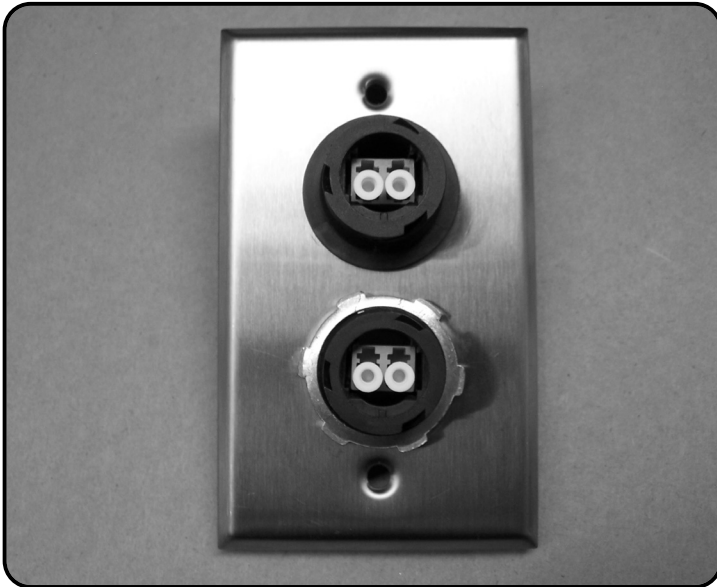


# Industrial LC Front /Back Outlet

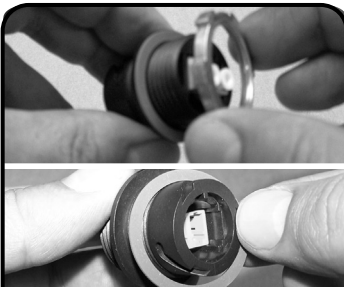

## Product Includes:

- A. 1 Outlet
- B. 1 Panel Gasket
- C. 1 Panel Nut

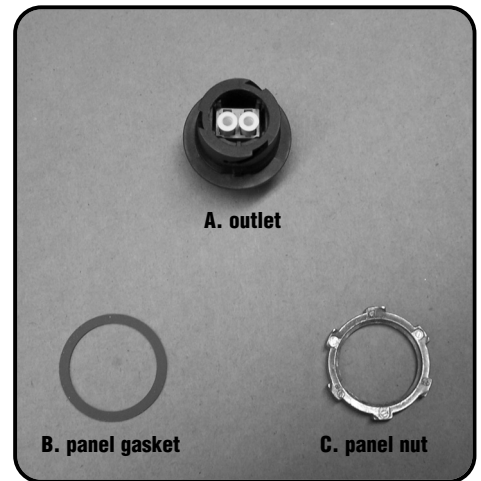


- 1** Remove panel nut. Reposition gasket if rear mount option is to be used.



- 2** Push the outlet through the faceplate\* bulkhead hole. Be sure faceplate keyway is properly aligned.


\*Contact Technical Support for dimensional mounting information

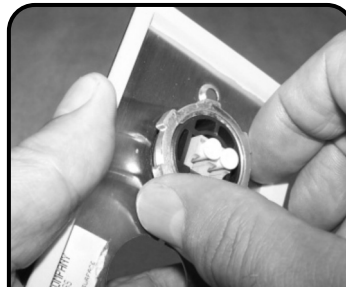

- 3** Place the panel nut over the flange and tighten to 1.69-2.26N-m (15-20 in-lbs). Note teeth of nut should face plate



- 4** Remove the dust caps and insert the LC connector or Industrial LC connector into the back of the industrial outlet.

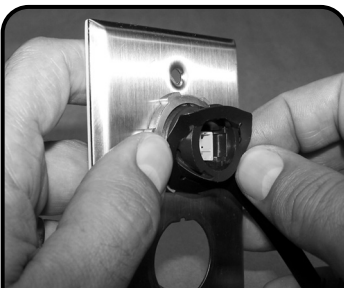

- 5** For fixed installation of optional dust cap (X-CAP) place securing tether over the outlet and seat in groove below coupling features.

Note: rear mount, option shown



- 6** The tether should seat in the groove completely as shown.



- 7** Secure the dust cap in position on the outlet and rotate ¼ turn clockwise to lock in place.

**To assist safe installations, comply with the following:**

- A. Use caution when installing or modifying telecommunications circuits.
- B. Never touch uninsulated wire terminals unless the circuit has been disconnected.
- C. Never install this device in a wet location.
- D. Never install wiring during a lightning storm.



**Worldwide Headquarters  
North America**

Watertown, CT USA  
Phone (1) 860 945 4200 US  
Phone (1) 888 425 6165

**Regional Headquarters  
EMEA**

Europe/Middle East/Africa  
Surrey, England  
Phone (44) 0 1932 571771

**Regional Headquarters  
Asia/Pacific**

Shanghai, P.R. China  
Phone (86) 21 5385 0303

**Regional Headquarters  
Latin America**

Bogota, Colombia  
Phone (571) 657 1950